



**EFFE two**

SWISS QUALITY

### 1 Headrest:

The height of the headrest can easily be adjusted, and the headrest also swivels (contoured form).

### 2 Lumbar support (optional):

Mesh version:

The lumbar support can be raised or lowered by pulling the plastic pad up or pushing it down with both hands.

Fully-upholstered version:

The lumbar support can be raised or lowered by pulling it up or pushing it down using both plastic handles.

### 3 Syncro®-dynamic Advanced mechanism:

The Syncro®-dynamic Advanced mechanism can be set using the lever at the bottom left.

To activate the mechanism: Pull the lever upwards; the seat and backrest synchronously follow your body movements = dynamic seated posture.

To lock the mechanism: Push the backrest backwards into the desired position, push the lever downwards and let go of the lever to fix the backrest in position. The seat and backrest can be locked in four positions.

### 4 Seat-depth adjustment using sliding seat (5 cm):

To increase the seat depth: Put your weight on the seat, pull out the button at the front right, move the seat into the desired position while holding the button and then let go of it to fix the seat.



To reduce the seat depth: Take your weight off the seat, pull out the button at the front right and the seat will automatically move back into the basic position.

### 5 Integrated seat-tilt adjustment:

Seat-tilt adjustment (up to -4°) during the movement process thanks to a seat that is divided into three sections with integrated active pelvic support (automatic).

### 6 Backrest counterpressure:

You should alter the backrest counterpressure to suit your bodyweight.

To increase the backrest counterpressure: Turn the wheel at the bottom right clockwise.

To reduce the backrest counterpressure: Turn the wheel at the bottom right anticlockwise.

### 7 Infinite seat-height adjustment:

To raise the seat: Take your weight off the seat, pull the front lever at the bottom right upwards and let go of it when the seat is at the desired height.

To lower the seat: Put your weight on the seat, pull the front lever at the bottom right upwards and let go of it when the seat is at the desired height.

### 7 Multifunctional armrests:

You can adjust the height (10 cm) by pressing the button under the armrest. By releasing the lever under the seat next to the armrest, you can pull the armrest out (6 cm) to achieve a larger seat area. EFFE two is also available with fixed armrests.

## GUARANTEE – NOTES

**Guarantee:** Independent of warranties for defects, Züco grants a 5-year guarantee in the case of normal use at 8 hours a day. If used for longer periods of time, the Guarantee period shortens accordingly. Product parts which are subject to general wear and defects caused by improper use, improper treatment, extreme climatic conditions, improper tampering, materials placed on the chair or deviations from the standard designs as requested by the customer are exempt from the guarantee.

**Castors:** hard castors are fitted as standard for soft floors. Soft castors (grey tread) are required for hard floors. The user may change the castors himself/herself if necessary.

**Maintenance:** the chair is maintenance-free if used in the correct manner. We recommend that you occasionally adjust the seat height.

**Cleaning:** please do not use any aggressive cleaners or chemical cleaning agents to clean the surfaces of the chair and the upholstery.

**Gas lifts:** only trained specialists may work on the gas pressure lifts. There is a considerable risk of injury if improper work is carried out.

**EFFE two meets technical and occupational medical requirements and is in conformity with DIN Standard 1335/1-3. The safety test Mark was issued by TÜV Rheinland.**

**We reserve the right to make technical changes.**